


RADONIX PC-Pro

Connection between Radonix PC-Pro and Stepper

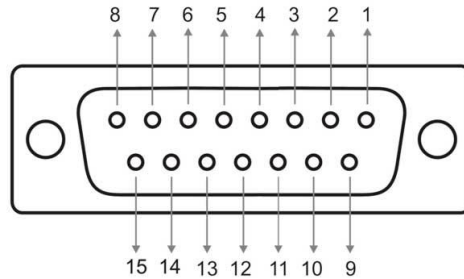

RadonixPC-Pro (DB15F)

RadonixPC-Pro Pins	Description	Stepper Pins
1	VCC +24 V	
2	Direction -	DIR -
3	Direction +	DIR +
4	Pulse -	PUL -
5	Pulse +	PUL +
6	Servo On	*
7	Ready	*
8	Encoder Zero	
9	Alarm Reset	
10	Ground	
11	Ground	
12	Ground	
13	Ground	
14	Ground	
15	Ground	

* For stepper motors, recommended to connect Servo On pin and Ready pin together.